



Small Ejector Spring



- Material: 302 stainless steel, passivated
- Used to provide a visual indication of whether or not the quarter-turn stud is fastened or unfastened.

Adjustment Formula

When using a stud ejector (ejector spring and wear washer)
add 0.8 to your Outer Panel Thickness of Total Material
Thickness.

P/No: 81-41-102-24

