 
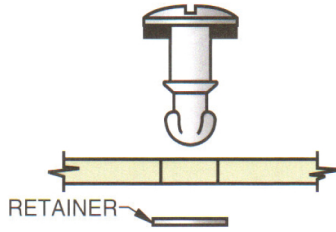 


Large Sealing Washer

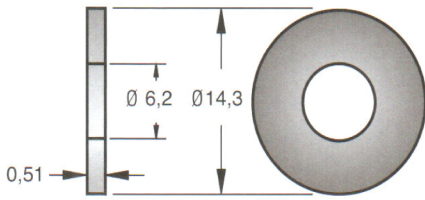

- Used to provide a seal under the head of a large quarter-turn stud
- Nitrile fibra core rubber
- Black



Adjustment Formula

Add 0.51 to your Outer Panel Thickness or Total Material Thickness

P/No: 85-43-201-38

southco®

Large Ejector Spring

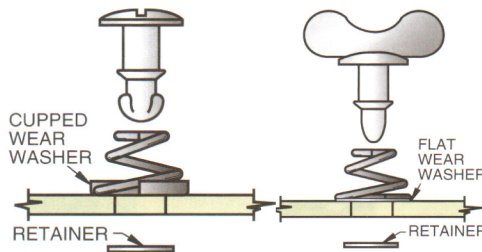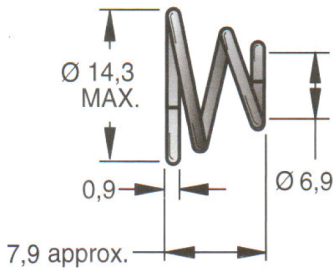

- Used to provide a visual indication of whether or not the quarter-turn stud is fastened.
- Type 302 stainless steel, passivated.



Adjustment Formula

When using a stud ejector (ejector spring and wear washer), add 1.5 to your outer panel thickness or Total Material Thickness

P/No: 14-18-150-24

southco®

Large Flat Nylon Wear Washer

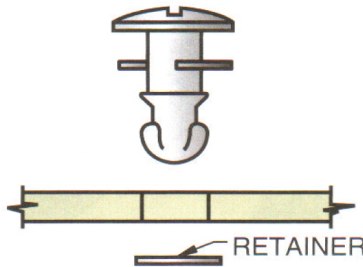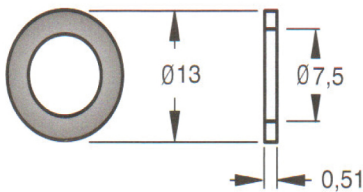

- Used to protect the panel surface from the turning quarter-turn stud
- Nylon, natural



Adjustment Formula

When using a wear washer, add 0.51 to your outer panel thickness or Total Material Thickness

P/No: 14-18-150-24

southco®

Large Cupped Nylon Wear Washer

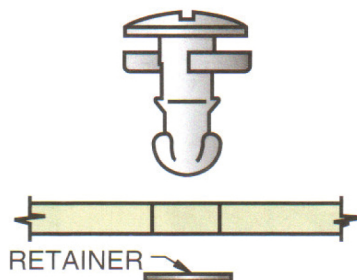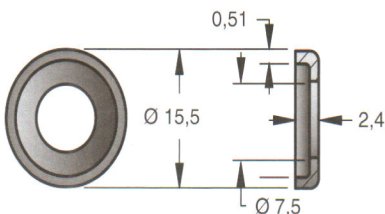

- Used to protect the panel surface from the turning quarter-turn stud
- Helps align ejector spring

Adjustment Formula

When using a wear washer, add 0.51 to your outer panel thickness or Total Material Thickness

Part Number

Natural 85-46-101-39

Black 85-46-101-41

southco®